

1-7. Theft deterrent system

Hybrid vehicle immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if the key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.



The indicator light flashes after the power switch has been turned "OFF" to indicate that the system is operating.

1

Before driving

n System maintenance

The vehicle has a maintenance-free type of hybrid vehicle immobilizer system.

n Conditions that may cause the system to malfunction

- 1 If the grip portion of the key is in contact with a metallic object.
- 1 If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle.

n Certifications for the hybrid vehicle immobilizer system

- For vehicles sold in the U.S.A.

FCC ID: NI4TMIMB-1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1-7. Theft deterrent system

CAUTION

n Certifications for the hybrid vehicle immobilizer system

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE

n For proper system operation

Do not modify, remove or disable the hybrid vehicle immobilizer system. If any unauthorized changes or modifications are made, the proper operation of the system cannot be guaranteed.

1-7. Theft deterrent system Alarm

The alarm warns of forcible entry using the horn and lights.



To arm the alarm, exit the vehicle, make sure that the doors, trunk and hood are closed, and lock all the doors.

The system will operate automatically once the indicator changes from lit to flashing.

1

Before driving

Deactivating or stopping the alarm

Do one of the following:

- 1 Unlock the doors or trunk using the smart access system with push-button start or the wireless remote control.
- 1 Start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

n Items to check before locking the vehicle

To prevent unintended triggering of the alarm, check that there is no one in the vehicle, and that all windows and moon roof are closed before locking the vehicle.

1-7. Theft deterrent system


■ When the 12 volt battery is disconnected

Be sure to cancel the alarm system.

If the 12 volt battery is discharged before canceling the alarm, the system may be triggered when the battery is reconnected.

■ Panic mode




When  is pushed for longer than about one second, the headlights/tail lights/emergency flashers will flash, the front and rear interior lights will come on, and an alarm will sound for about 60 seconds to deter any person from trying to break into or damage your vehicle.

To stop the alarm, push any button on the wireless remote control.

1-7. Theft deterrent system

Theft prevention labels (U.S.A.)

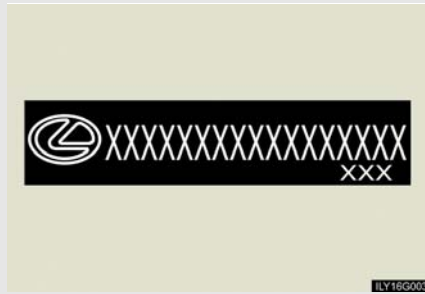

These labels are attached to the vehicle to reduce vehicle theft by facilitating the tracing and recovery of parts from stolen vehicles. Do not remove under penalty of law.

1

Before driving